














 
 

 

 

 

 
 
 

 





 
 
 
 
 
 




Originalfernbedienung Ersatzfernbedienung

	View DVD		Smart
	View VCR		Media
	TV / VCR		TV/R
	Input SEL.		AV
	Standby / On		Power
	Open / Close		Eject
	Info		Info
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9
	0		0

Originalfernbedienung Ersatzfernbedienung

	Timer		Shift + AV
	F.ADV / Step		Pre Ch
	I<<		I<<
	Rec		Rec
	Speed		Sleep
	>>I		>>I
	<<		<<
	Stop		Stop
	Play		Play
	Pause		Pause
	>>		>>
	TRK +		Vol +
	TRK -		Vol -
	Audio		Dual
	Prog +		Ch +
	Prog -		Ch -
	Menu		Menu





Originalfernbedienung Ersatzfernbedienung

	Return		Back
	Up		Up
	Right		Right
	Down		Down
	Left		Left
	OK		Ok
	Disc Menu		D. Menu
	Clear		Exit
	Zoom	+	Shift + Eject
	EZ View		Options
	Subtitle		Subt
	Angle / IPC		Format
	Mode / Repeat		Text
	Mark / Search	+	Shift + TV/R

Originalfernbedienung Ersatzfernbedienung

