 
 
 
 




Originalfernbedienung Ersatzfernbedienung

	Power		Power
	Clock		D. Menu
	Timer		AV
	Open/Close		Eject
	Menu		Menu
	Enter iPod		Ok
	Play iPod		Shift + Play
	>>I iPod		Shift + >>I
	Pause iPod		Shift + Pause
	↑ iPod		Up
	↓ iPod		Down
	I<< iPod		Shift + I<<
	Repeat iPod		Shift + Text
	Shuffle iPod		Shift + Subt
	iPod		Green
	CD		Yellow
	USB		Blue

Originalfernbedienung Ersatzfernbedienung

	AUX		Red
	Tuner		Smart
	Tuning Up		Shift + Ch +
	Tuning Down		Shift + Ch -
	Preset Up		Ch +
	Preset Down		Ch -
	Memory		TV/R
	Mono		Dual
	Dimmer		3D
	Sleep		Sleep
	Display		Info
	Volume+		Vol +
	Volume-		Vol -
	Mute		Mute
	Option		Options
	Up		Shift + Up
	Down		Shift + Down



