


 

 

 








 
 


 

 

 

 








Originalfernbedienung Ersatzfernbedienung

	Power		Power
	FL Display		Smart
	TUNER BAND		Green
	AUX		Red
	Top Menu		D. Menu
	Menu		Menu
	Up		Up
	Left		Left
	Enter		Ok
	Right		Right
	Down		Down
	Display		Info
	Return		Back
	I<<<		I<<<
	>>>		>>>
	<<<		<<<
	>>>		>>>

Originalfernbedienung Ersatzfernbedienung

	Stop		Stop
	Pause		Pause
	Play		Play
	Disc Skip		Sleep
	SFC		Eject
	CH-		Ch -
	CH+		Ch +
	Vol+		Vol +
	Vol-		Vol -
	Muting		Mute
	Subwoofer		Shift + 4
	Action		Options
	Subtitle		Subt
	Audio		Dual
	Angle		Format
	Marker		3D
	CH Select		Shift + Media



