










 


 

 

 

 









 







Originalfernbedienung Ersatzfernbedienung

	POWER		Power
	CH+		Ch +
	CH-		Ch -
	VOL+		Vol +
	VOL-		Vol -
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9
	0		0
	MUTE		Mute
	RTN.		Back

Originalfernbedienung Ersatzfernbedienung

	ARC		Smart
	APC		Media
	UP		Up
	LEFT		Left
	OK		Ok
	RIGHT		Right
	DOWN		Down
	MENU		Menu
	EXIT		Exit
	TELETEXT		Text
	Index		Play
	Clock / Subpage		Pause
	Hold		Stop
	Reveal		Rec
	Cancel		<<
	Size		>>
	RED		Red



