

 
 


 
 















 




 





Originalfernbedienung Ersatzfernbedienung

	Power		Power
	Sleep		Sleep
	CBL/SAT		1
	DVD		2
	Blu-ray		3
	Game		4
	AUX		5
	iPod/USB		6
	Tv Audio		7
	FM		8
	Network		9
	Internet Radio		TV/R
	Channel+		Ch +
	Channel-		Ch -
	Page Up		Subt
	Page Down		Dual
	Green/Movie		Green

Originalfernbedienung Ersatzfernbedienung

	Red/Music		Red
	Blue/Game		Blue
	Yellow/Pure		Yellow
	Info		Info
	Option		Options
	Back		Back
	Setup		Menu
	Up		Up
	Down		Down
	Right		Right
	Left		Left
	Enter		Ok
	Volume+		Vol +
	Volume-		Vol -
	Mute		Mute
	Favorite Station 1		Text
	Favorite Station 2		AV



