



Originalfernbedienung Ersatzfernbedienung

	Power		Power
	Mute		Mute
	Red		Red
	Green		Green
	Yellow		Yellow
	Blue		Blue
	P.Mode		3D
	S.Mode		Dual
	Sleep		Sleep
	Aspect		Format
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7

Originalfernbedienung Ersatzfernbedienung

	8		8
	9		9
	0		0
	-/--		Guide
	Recall		Back
	Input		AV
	Display		Info
	Up		Up
	Left		Left
	OK		Ok
	Right		Right
	Down		Down
	Menu		Menu
	Exit		Exit
	Vol+		Vol +
	Vol-		Vol -
	TV/Radio		TV/R

 

 
 




Originalfernbedienung Ersatzfernbedienung

	Audio		List
	CH+		Ch +
	CH-		Ch -
	Play/Pause / Text		Pause
	Play/Pause / Text		Play
	Play/Pause / Text		Text
	Stop / Size		Stop
	<< / Hold		<<
	>> / Index		>>
	I<< / Reveal		I<<
	>>I / Subpage		>>I
	Cancel		Shift + Back
	Mix		Options
	FAV-		Shift + Down
	FAV+		Shift + Up
	FAV		Pre Ch
	Auto		Smart

Originalfernbedienung Ersatzfernbedienung

	Repeat		Shift + Text
	Subtitle		Subt

