 





 

 
 
 








 
 
 
 
 
 
 

 



 
 

 


 

 


 
 

 
 
 






Originalfernbedienung Ersatzfernbedienung

	Power		Power
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9
	0		0
	TV		TV/R
	Guide		Guide
	Vol+		Vol +
	Vol-		Vol -
	Mute		Mute
	List		List



 

 
 

 




 
 
 
 
 


 






 
 
Originalfernbedienung Ersatzfernbedienung

	P+		Ch +
	P-		Ch -
	Source		AV
	APP		Media
	History		Options
	PRE-CH		Pre Ch
	[i]		Info
	Up		Up
	Down		Down
	Right		Right
	Left		Left
	OK		Ok
	≡		Menu
	Home		Smart
	O)/Lang		Dual
	Back		Back
	Subtitle		Subt





Originalfernbedienung Ersatzfernbedienung

	Text		Text
	Zoom		Eject
	3D		3D
	Sleep		Sleep
	Rec		Rec
	Play		Play
	Pause		Pause
	<<		<<
	Stop		Stop
	>>		>>
	Red		Red
	Green		Green
	Yellow		Yellow
	Blue		Blue

Originalfernbedienung Ersatzfernbedienung

