





 
 
 
 
 











 

 
 
 

 

 


 
 




Originalfernbedienung Ersatzfernbedienung

	Power		Power
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9
	0		0
	Lang		Dual
	[=]..		Subt
	V+		Vol +
	V-		Vol -
	Mute		Mute
	Smart		Smart

Originalfernbedienung Ersatzfernbedienung

	P+		Ch +
	P-		Ch -
	Home		Shift + Smart
	Guide		Guide
	i		Info
	Exit		Exit
	←		Back
	Up		Up
	Down		Down
	Right		Right
	Left		Left
	OK		Ok
	Netflix		Media
	YouTube		List
	prime video		Options
	Google Play		TV/R
	Menu		Menu





Originalfernbedienung		Ersatzfernbedienung		Originalfernbedienung		Ersatzfernbedienung	
	Source		AV				
	<<		<<				
	Stop		Stop				
	>>		>>				
	Rec		Rec				
	Pause		Pause				
	Play		Play				
	Text		Text				
	Red		Red				
	Green		Green				
	Yellow		Yellow				
	Blue		Blue				

