






 
 


 
 
 
 
 
 

 
 
 
 
 
 

 





Originalfernbedienung Ersatzfernbedienung

	Power		Power
	Mute		Mute
	P.Mode	 + 	Shift + Format
	S.Mode	 + 	Shift + Dual
	Nicam / A2		Dual
	Sleep		Sleep
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9
	0		0
	-/--		Guide

Originalfernbedienung Ersatzfernbedienung

	Recall		Pre Ch
	FAV	 + 	Shift + Pre Ch
	Fav +	 + 	Shift + Up
	Fav -	 + 	Shift + Down
	Red		Red
	Green		Green
	Yellow		Yellow
	Blue		Blue
	Source		AV
	Info		Info
	Up		Up
	Right		Right
	Down		Down
	Left		Left
	OK		Ok
	Menu		Menu
	Exit		Exit





Originalfernbedienung **Ersatzfernbedienung**

	Vol +		Vol +
	Vol -		Vol -
	Media		Media
	TV / Radio		TV/R
	CH +		Ch +
	CH -		Ch -
	Play/Pause / Text		Play
	Play/Pause / Text		Pause
	Play/Pause / Text		Text
	<< / Size		<<
	<< / Size		3D
	>> / Reveal		>>
	Stop / Hold		Stop
	I<< / Index		I<<
	>>I / Subpage		>>I
	Cancel		Shift + Exit
	Subtitle		Subt

Originalfernbedienung **Ersatzfernbedienung**

	Rec		Shift + Text
	Timeshift		Smart
	A-B		Back
	EPG		Format

