 


 
 
 
 

 

 

 

 
 
 
 
 
 
 
 

 

 
 

 
 

 

 

 



 

 
 
 


 

 
 
 

 
 

 








Originalfernbedienung Ersatzfernbedienung

	Power Receiver		Power
	DVD / Analog 6CH		Shift + 1
	TV		Shift + 2
	VCR		Shift + 6
	CD		Shift + 3
	Tape / Monitor		Shift + 4
	Tuner / Band		Shift + 7
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9
	0		0


 
 
Originalfernbedienung Ersatzfernbedienung

	Disc / Direct Tuning		Smart
	≥10 / -/--		Guide
	Volume+		Vol +
	Volume-		Vol -
	I<< / <<		I<<
	>> / >>I		>>I
	Up		Up
	Left		Left
	Enter		Ok
	Right		Right
	Down		Down
	Menu / Play List		Menu
	Subwoofer		Dual
	Muting		Mute
	Test / Setup		Options
	◀ / -		Ch -
	▶ / +		Ch +





Originalfernbedienung Ersatzfernbedienung

	Level		Yellow
	Effect		Info
	Stereo / 2CH Mix		Blue
	Dolby PL IIx		Red
	NEO 6		Green
	SFC		Media

Originalfernbedienung Ersatzfernbedienung

