 

 





 


















 





 

 

 
 


 


 


 

 












 
 
 
 





Originalfernbedienung Ersatzfernbedienung

	Mute		Mute
	Power		Power
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9
	0		0
	-/--		Guide
	AV		AV
	Menu		Menu
	Red		Red
	OK		Ok




 








 

Originalfernbedienung Ersatzfernbedienung

	Green		Green
	P:P		Pre Ch
	Yellow		Yellow
	Analog		Smart
	Blue		Blue
	Up		Up
	P+		Ch +
	P-		Ch -
	Down		Down
	Right		Right
	Vol+		Vol +
	Vol-		Vol -
	Left		Left
	Recall		Back
	Sleep		Sleep
	Status		3D
	Tv/TXT		Text





Originalfernbedienung Ersatzfernbedienung

 STOP	Stop		Stop
 REVEAL	Reveal	 APP MEDIA	Media
 SIZE	Size	 PICTURE FORMAT	Format
 MIX	Mix	 SETTINGS OPT	Options
 INDEX	Index	 DISPLAY INFO	Info
 SUBCODE	Subcode	 AD SUBT	Subt
 CANCEL	Cancel	 SHIFT + RETURN BACK	Shift + Back

Originalfernbedienung Ersatzfernbedienung

