

 




 















**Originalfernbedienung    Ersatzfernbedienung**

	On		Power
	Standby		Shift + Power
	Computer		1
	DVI		2
	S-Video		3
	Video		4
	Break Timer		Sleep
	Freeze		Stop
	AV Mute		Mute
	Magnify-		I<<
	Magnify+		>>I
	Page Up		Ch +
	Page Down		Ch -
	Vol+		Vol +
	Vol-		Vol -
	Pointer		D. Menu
	Spot		Info

**Originalfernbedienung    Ersatzfernbedienung**

	Up		Up
	Left		Left
	Enter		Ok
	Right		Right
	Down		Down
	Left Click		Exit
	Return / Right Click		Back
	Keystone		Subt
	Picture Mode		Format
	Menu/Help		Menu
	Auto/Sync		Options
	Eco+Quiet		3D
	Resize		Eject

