
 
 




**Originalfernbedienung    Ersatzfernbedienung**

	Power		Power
	Sleep		Sleep
	Timer/Play		AV
	Clock/Timer		Shift + AV
	Program		Shift + Sleep
	Vol+		Vol +
	Vol-		Vol -
	Mute		Mute
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9

**Originalfernbedienung    Ersatzfernbedienung**

	0		0
	+10		Guide
	Del		Exit
	Bluetooth		Green
	CD/USB		Yellow
	Radio/EXT-IN		Blue
	I<<		I<<
	Pause		Pause
	Play		Play
	>>I		>>I
	<<		<<
	Stop		Stop
	>>		>>
	D.Bass		Subt
	Sound		Dual
	Preset EQ		Text
	Display		Info





**Originalfernbedienung   Ersatzfernbedienung**

	Dimmer		3D
	Play Menu		Menu
	Setup		Options
	Radio Menu		D. Menu
	Up		Up
	Down		Down
	Right		Right
	Left		Left
	OK		Ok

**Originalfernbedienung   Ersatzfernbedienung**