
 

 

 


Originalfernbedienung Ersatzfernbedienung

	Power		Power
	Image		Help / Info
	Reset		3D / Invert
	S-Video		Mode
	RGB		Eco / Aspect
	Freeze		Freeze / Timer
	D.Zoom		+ / Play
	Video		Comp / Video
	Keystone Up		Up
	Keystone Down		Down
	Right/Source		Right
	Left/Auto		Left
	OK		Enter
	Menu		Menu
	Input Search		Source
	Vol+		Vol + / Page +
	Vol-		Vol - / Page -

Originalfernbedienung Ersatzfernbedienung

	AV Mute		Blank / Mute

