
 












 



























Originalfernbedienung Ersatzfernbedienung

| | | | |
|---|------------|---|-----------------------|
|  | Power |  | Power |
|  | Mute |  | Mute / Dimmer |
|  | Play |  | Play / Slow |
|  | Pause |  | Pause / Step / Freeze |
|  | Stop/Rec |  | Stop / Hold |
|  | Reg Rapide |  | Rec / Rec Mode |
|  | << |  | << / Tune- |
|  | >> |  | >> / Tune+ |
|  | S.Mode |  | Sound / Title |
|  | I/II/Audio |  | Audio / Lang I/II |
|  | SS-Titre |  | Subtitle / EQ |
|  | P.Mode |  | Picture / Format |
|  | Minuterie |  | Sleep / Timer |
|  | Text |  | Text / Goto |
|  | Source |  | AV / Input / RDS |
|  | Menu |  | Menu / Home |
|  | Up |  | Up |

Originalfernbedienung Ersatzfernbedienung

| | | | |
|---|----------|---|-----------------|
|  | Info |  | Info / Angle |
|  | Left |  | Left |
|  | OK/Liste |  | OK |
|  | Right |  | Right |
|  | Down |  | Down |
|  | Retour |  | Back / Return |
|  | Vol+ |  | Vol+ |
|  | Index |  | Smart / List |
|  | CH+ |  | CH+ / Page+ |
|  | Vol- |  | Vol- |
|  | Plus |  | Display / Media |
|  | CH- |  | CH- / Page- |
|  | 1 |  | 1 |
|  | 2 |  | 2 |
|  | 3 |  | 3 |
|  | 4 |  | 4 |
|  | 5 |  | 5 |





Originalfernbedienung Ersatzfernbedienung

| | | | |
|--|--------|--|-----------------------------|
| | 6 | | 6 |
| | 7 | | 7 |
| | 8 | | 8 |
| | 9 | | 9 |
| | Guide | | Guide / EPG / -/-- |
| | 0 | | 0 |
| | Recall | | Fav / Marker / PC |
| | Red | | Red / Netflix / Search |
| | Green | | Green / APP / Repeat |
| | Yellow | | Yellow / YouTube / Repeat |
| | Blue | | Blue / Prime Video / Random |
| | Ratio | | Shift + Picture / Format |
| | TV | | Shift + 1 |
| | | | |
| | | | |
| | | | |
| | | | |

Originalfernbedienung Ersatzfernbedienung

| | | | |
|--|--|--|--|
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |

