


 

 

 
 
 

 
 
 

 

 

 

 
 


 












 




 


 







**Originalfernbedienung    Ersatzfernbedienung**

	Power		Power
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9
	0/Quick Acces		0
	List/Guide		Guide
	.../AD/SAP		Subt
	Vol+		Vol +
	Vol-		Vol -
	Mute		Mute
	CH+		Ch +

**Originalfernbedienung    Ersatzfernbedienung**

	CH-		Ch -
	Source		AV
	Home		Smart
	Micro		List
	Back		Back
	*		Menu
	Up		Up
	Down		Down
	Right		Right
	Left		Left
	OK		Ok
	Wheel Up		>>I
	Wheel Down		I<<
	Red		Red
	Green		Green
	Yellow		Yellow
	Blue		Blue





Originalfernbedienung   Ersatzfernbedienung

	Netflix		Media
	prime video		D. Menu
	Disney +		Format
	Rakuten Tv		3D
	Smart Colors		Shift + Smart
	o		Options

Originalfernbedienung   Ersatzfernbedienung