



Originalfernbedienung Ersatzfernbedienung

	Power		Power
	[i+]/Timer		Info / Angle
	[i+]/Timer		Sleep / Timer
	Input 1		Shift + 1
	Input 2		Shift + 2
	Input 3		Shift + 3
	Input 4		Shift + 4
	PC		Shift + Fav / Marker / PC
	Screen Split		Shift + Red / Netflix /
	Screen Swap		Shift + Green / APP /
	PIP Swap		Shift + Yellow / YouTube /
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6

Originalfernbedienung Ersatzfernbedienung

	7		7
	8		8
	9		9
	CH Return		Guide / EPG / -/--
	0		0
	CH Enter		Fav / Marker / PC
	P+		CH+ / Page+
	I-II		Audio / Lang I/II
	Vol+		Vol+
	P-		CH- / Page-
	Mute		Mute / Dimmer
	Vol-		Vol-
	Return		Back / Return
	Up		Up
	Home Menu		Menu / Home
	Left		Left
	Enter		OK





Originalfernbedienung Ersatzfernbedienung

	Right		Right
	Down		Down
	AV Selection		AV / Input / RDS
	Red		Red / Netflix / Search
	Green		Green / APP / Repeat
	Yellow		Yellow / YouTube / Repeat
	Blue		Blue / Prime Video / Random
	[ I+ ]/[ ≡ ♦ ]		Setup / OPT /
	[ <> ]		Picture / Format
	[ ... ]		Subtitle / EQ
	[ ≡ ? ]		D.Menu / Top
	[ ≡ i ]		Display / Media
	[ ≡ ]		Text / Goto

Originalfernbedienung Ersatzfernbedienung


