 

 







 

 

 





 




Originalfernbedienung Ersatzfernbedienung

	On		Power
	Off		Shift + Power
	MagicInfo		Smart
	MDC		Media
	Lock		List
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9
	0		0
	+100 / +/-		Guide
	Enter / Pre-CH		Pre Ch

Originalfernbedienung Ersatzfernbedienung

	Mute		Mute
	Vol+		Vol +
	Vol-		Vol -
	CH/P+		Ch +
	CH/P-		Ch -
	Source		AV
	Menu		Menu
	TTX/MIX		Text
	Info		Info
	Exit		Exit
	Up		Up
	Left		Left
	Enter		Ok
	Right		Right
	Down		Down
	Red / Auto		Red
	Green / M/B / P.Mode		Green





Originalfernbedienung	Ersatzfernbedienung
-----------------------	---------------------

Yellow / S.Mode	Yellow
Blue / Still	Blue
FM Radio	TV/R
P.Size	Format
SRS	Options
PIP	Shift + Red
PIP Source	Shift + Green
PIP Size	Shift + Blue
PIP Swap	Shift + Yellow
Dual/MTS I-II	Dual
<< Rew	<<
<< Rew	I<<
Stop	Stop
Play / Pause	Play
Play / Pause	Pause
FF >>	>>
FF >>	>>I

Originalfernbedienung	Ersatzfernbedienung
-----------------------	---------------------

