
 





Originalfernbedienung Ersatzfernbedienung

	Power		Power
	Mute		Mute
	Red		Red
	Green		Green
	Yellow		Yellow
	Blue		Blue
	EPG		Guide
	Repeat		D. Menu
	Zoom		Eject
	Goto		3D
	Sub-T		Subt
	Audio		Dual
	Sleep		Sleep
	TV/Radio		TV/R
	Text		Text
	Play / Index		Play
	Pause / Mix		Pause


 




 







 
Originalfernbedienung Ersatzfernbedienung

	Stop / Reveal		Stop
	<< / Hold		<<
	>> / Subpage		>>
	l<< / Size		l<<
	>>l / Cancel		>>l
	Info		Info
	Input		AV
	Up		Up
	Left		Left
	OK		Ok
	Right		Right
	Down		Down
	Menu		Menu
	Exit		Exit
	Vol+		Vol +
	Vol-		Vol -
	P-Mode		Format


 




**Originalfernbedienung Ersatzfernbedienung**

	S-Mode		List
	CH+		Ch +
	CH-		Ch -
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9
	-/--		Shift + Guide
	0		0
	Recall		Back
	Fav		Pre Ch
	Fav+		Smart

**Originalfernbedienung Ersatzfernbedienung**

	Fav-		Media

