

















 





 

 











Originalfernbedienung Ersatzfernbedienung

	Power		Power
	Power Tv		Shift + Power
	Vol+ Tv		Vol+
	CH+ TV		Shift + CH+ /
	AV Input Tv		AV / Input / RDS
	Vol- Tv		Vol-
	CH- Tv		Shift + CH- /
	1		1
	2		2
	3		3
	Rec		Rec / Rec Mode
	4		4
	5		5
	6		6
	CH+		CH+ / Page+
	7		7
	8		8

Originalfernbedienung Ersatzfernbedienung

	9		9
	CH-		CH- / Page-
	Last View		Shift + Back / Return
	0		0
	Drive Select		Display / Media
	Prog/Check		Menu / Home
	-10s		Fav / Marker / PC
	+60s		Shift + Guide / EPG / -/-
	Internet		Smart / List
	Netflix		Shift + Red / Netflix /
	<<		<< / Tune-
	Play		Play / Slow
	>>		>> / Tune+
	I<<		I<< / Preset-
	Pause		Pause / Step / Freeze
	>>I		>>I / Preset+
	Stop		Stop / Hold





Originalfernbedienung Ersatzfernbedienung

	i/Status		Info / Angle
	Guide		Guide / EPG / -/--
	Exit		Exit / Cancel / Clear
	Video Menu		Shift + 4
	Up		Up
	Function Menu		D.Menu / Top
	Left		Left
	OK		OK
	Right		Right
	Option		Setup / OPT /
	Down		Down
	Return		Back / Return
	Red		Red / Netflix / Search
	Green		Green / APP / Repeat
	Yellow		Yellow / YouTube / Repeat
	Blue		Blue / Prime Video / Random
	Audio		Audio / Lang I/II

Originalfernbedienung Ersatzfernbedienung

	Delete		Shift + Exit / Cancel / Clear
	Text		Text / Goto
	STTL		Subtitle / EQ

