


 
 

 
 

 
 

 


 
 

 

 












**Originalfernbedienung    Ersatzfernbedienung**

	Power		Power
	Sleep		Sleep
	Muting		Mute
	Tuner/Band		Green
	Open/Close		Eject
	Auto Format		Format
	Auto Format		AV
	DSGX		List
	Tuner Menu		Menu
	Play Mode		Yellow
	Repeat		Text
	FM Mode		Shift + TV/R
	Night Mode		Blue
	Function		3D
	1		1
	2		2
	3		3

**Originalfernbedienung    Ersatzfernbedienung**

	4		4
	5		5
	6		6
	7		7
	8		8
	9		9
	0		0
	>10		Guide
	Enter1		Pre Ch
	Audio		Dual
	Angle		Red
	Subtitle		Subt
	I<</Preset-		I<<
	>>I/Preset+		>>I
	<</Tuning-/<I		<<
	>>/Tuning+/Slow		>>
	Play		Play



