



Originalfernbedienung	Ersatzfernbedienung	Originalfernbedienung	Ersatzfernbedienung
	Power		Power
	Mute		Mute
	Pause		Pause
	AV		AV
	Audio		Dual
	Edit		Smart
	Menu		Menu
	Info		Info
	P+		Ch +
	P-		Ch -
	Exit		Exit
	Up/Channel+		Up
	Down/Channel-		Down
	Right		Right
	Left		Left
	OK		Ok
	Vol+		Vol +
	Vol-		Vol -
	Red/SAT		Red
	Green/Text		Green
	Yellow/Sub		Yellow
	Blue/RCL		Blue
	FAV		Pre Ch
	TV/R		TV/R
	EPG		Guide
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9





Originalfernbedienung Ersatzfernbedienung Originalfernbedienung Ersatzfernbedienung

	0		0
	Mosaic		Media
	Replay		3D

