



Originalfernbedienung	Ersatzfernbedienung		Ersatzfernbedienung
POWER	POWER		Power
RESET	RESET		Volt / Focus
COMP.	COMP.		Comp / Video
VIDEO	VIDEO	+	Shift + Comp / Video
S-VIDEO	S-VIDEO		Mode
FREEZE	FREEZE		Freeze / Timer
MAGNIFY	MAGNIFY		+ / Play
UP / K-STONE+	UP / K-STONE+		Up
LEFT / SOURCE	LEFT / SOURCE		Left
LEFT / SOURCE	LEFT / SOURCE		Source
ENTER	ENTER		Enter
RIGHT / AUTO	RIGHT / AUTO		Right
RIGHT / AUTO	RIGHT / AUTO		Auto
DOWN / K-STONE-	DOWN / K-STONE-		Down
MENU	MENU		Menu
SOURCE LOCK	SOURCE LOCK	+	Shift + Source
AV-MUTE	AV-MUTE		Blank / Mute

Originalfernbedienung	Ersatzfernbedienung		Ersatzfernbedienung
- VOL-	VOL-		Vol - / Page -
VOL +	VOL+		Vol + / Page +

