
 













 

 

 

 






 
 






Originalfernbedienung	Ersatzfernbedienung	Originalfernbedienung	Ersatzfernbedienung
On/Off		Power	
Audio Off		Mute	
Slow Up		Ch +	
Stop		Stop	
Slow Down		Ch -	
Subt.		Subt	
Auto/Track		Sleep	
Pause		Pause	
Rep/A-B		TV/R	
Title		List	
Repeat/1/All		Text	
Zoom		Eject	
DVD/TV		AV	
Menu		Menu	
Menu Up		Up	
Display		Info	
Menu Left		Left	
OK Enter		Ok	
Menu Right		Right	
Return		Exit	
Menu Down		Down	
Progr.		Back	
Next		>>	
Volume+		Vol +	
Volume-		Vol -	
Prev.		<<	
Top Menu		D. Menu	
1		1	
2		2	
3		3	
4		4	
5		5	
6		6	
7		7	



Originalfernbedienung	Ersatzfernbedienung	Originalfernbedienung	Ersatzfernbedienung
8			
9			
+10			
0			
C/CH			
Rewind			
Setup			
F.Forward			
Audio			
Video			
Play			
Record			

