



 

 

 
 














 


 

 








 







 



 
 

 
 
 


 
 







Originalfernbedienung Ersatzfernbedienung

	Power		Power
	Input		AV
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9
	0		0
	Guide		Guide
	CH.List		List
	Play		Play
	Red		Red
	Green		Green

Originalfernbedienung Ersatzfernbedienung

	Yellow		Yellow
	Blue		Blue
	[=]		Menu
	Pause		Pause
	Up		Up
	Down		Down
	Right		Right
	Left		Left
	OK		Ok
	Back		Back
	Exit		Exit
	Vol+		Vol +
	Vol-		Vol -
	Home		Smart
	Micro		Media
	CH+		Ch +
	CH-		Ch -





Originalfernbedienung Ersatzfernbedienung

	Subtitle		Subt
	Mute		Mute
	Text		Text
	Free		Options
	Sports		TV/R
	Chili		Dual
	Netflix		Shift + Media
	prime video		3D
	YouTube		Pre Ch
	TV Timvision		Shift + TV/R
	Rakuten Tv		D. Menu
	Rai Play		Shift + Smart

Originalfernbedienung Ersatzfernbedienung

