 




 
 









 


 

 
 






 
 
 


 

 
 



 
 







 

 

 


 








 





Originalfernbedienung Ersatzfernbedienung

|   |            |   |        |
|---|------------|---|--------|
|    | Standby    |    | Power  |
|    | Mute       |    | Mute   |
|    | 1          |    | 1      |
|    | 2          |    | 2      |
|    | 3          |    | 3      |
|    | 4          |    | 4      |
|    | 5          |    | 5      |
|    | 6          |    | 6      |
|    | 7          |    | 7      |
|    | 8          |    | 8      |
|   | 9          |   | 9      |
|  | 0/10       |  | 0      |
|  | Recall/+10 |  | Pre Ch |
|  | Rec List   |  | List   |
|  | EPG        |  | Guide  |
|  | Subtitle   |  | Subt   |
|  | Audio      |  | Dual   |

Originalfernbedienung Ersatzfernbedienung

|   |          |   |                |
|---|----------|---|----------------|
|    | Display  |    | Info           |
|    | Tv/Radio |    | TV/R           |
|    | Menu     |    | Menu           |
|    | Exit     |    | Exit           |
|    | Up       |    | Up             |
|    | Down     |    | Down           |
|    | Right    |    | Right          |
|    | Left     |    | Left           |
|    | OK       |    | Ok             |
|    | FAV      |    | Shift + Pre Ch |
|   | Rec      |   | Rec            |
|  | Media    |  | Media          |
|  | Vol+     |  | Vol +          |
|  | Vol-     |  | Vol -          |
|  | CH+      |  | Ch +           |
|  | CH-      |  | Ch -           |
|  | Source   |  | AV             |

 
 
 







Originalfernbedienung Ersatzfernbedienung

|   |                  |   |                |
|---|------------------|---|----------------|
|    | PMode            |  +  | Shift + Format |
|    | SMode            |  +  | Shift + Dual   |
|    | Sleep            |    | Sleep          |
|    | DVD Menu/Text    |    | Text           |
|    | A-B/Hold         |    | 3D             |
|    | Goto/Reveal      |    | Options        |
|    | Play             |    | Play           |
|    | DVD              |    | D. Menu        |
|    | Pause/Timeshift  |    | Pause          |
|    | Stop             |    | Stop           |
|   | Open/Close/Index |   | Eject          |
|  | Size             |    | Format         |
|  | <<               |    | <<             |
|  | >>               |    | >>             |
|  | I<<              |    | I<<            |
|  | >>I              |    | >>I            |
|  | Red              |    | Red            |

Originalfernbedienung Ersatzfernbedienung

|   |               |   |        |
|---|---------------|---|--------|
|  | Green/Angle   |  | Green  |
|  | Yellow/Repeat |  | Yellow |
|  | Blue/Title    |  | Blue   |

