



Originalfernbedienung Ersatzfernbedienung

	Power		Power
	Mute		Mute
	Red		Red
	Green/Mouse		Green
	Yellow		Yellow
	Blue		Blue
	<</Index		<<
	>>/Hold		>>
	I<</Size		I<<
	>>I/Subpage		>>I
	Play		Play
	Pause		Pause
	Stop		Stop
	Nicam/A2		Dual
	Subtitle		Subt
	TXT		Text
	Cancel		Media

Originalfernbedienung Ersatzfernbedienung

	Reveal		3D
	EPG		Guide
	Tv/Radio		TV/R
	FAV		Pre Ch
	Nothing 1		D. Menu
	Sleep		Sleep
	Disp		Info
	Input		AV
	Menu		Menu
	Exit		Exit
	Up		Up
	Down		Down
	Right		Right
	Left		Left
	OK		Ok
	Vol+		Vol +
	Vol-		Vol -





Originalfernbedienung Ersatzfernbedienung

	Home		Smart
	CH.L		List
	CH+		Ch +
	CH-		Ch -
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9
	0		0
	Nothing 2		Eject
	Recall		Back
	Picture		Shift + Format

Originalfernbedienung Ersatzfernbedienung

	Aspect		Format
	Sound		Shift + Dual

