

 


 







 
 
 



 
 
 
 
 

 

 
 

 






Originalfernbedienung Ersatzfernbedienung

	Power		Power
	Mute		Mute
	Red		Red
	Green		Green
	Yellow		Yellow
	Blue		Blue
	EPG		Guide
	Rec		D. Menu
	Rec. List		Eject
	T-Shift		3D
	Sub-T		Subt
	Audio		Dual
	Sleep		Sleep
	TV/Radio		TV/R
	Text		Text
	Play / Index		Play
	Pause / Mix		Pause

Originalfernbedienung Ersatzfernbedienung

	Stop / Reveal		Stop
	<< / Hold		<<
	>> / Subpage		>>
	l<< / Size		l<<
	>>l / Cancel		>>l
	Info		Info
	Input		AV
	Up		Up
	Left		Left
	OK		Ok
	Right		Right
	Down		Down
	Menu		Menu
	Exit		Exit
	Vol+		Vol +
	Vol-		Vol -
	P-Mode		Format



