



Originalfernbedienung Ersatzfernbedienung

	Power		Power
	<<		<< / Tune-
	>>		>> / Tune+
	Stop		Stop / Hold
	Play		Play / Slow
	I<</Volume-		I<< / Preset-
	>>I/Volume+		>>I / Preset+
	Pause		Pause / Step / Freeze
	</Disc Skip+		Rec / Rec Mode
	Shift		Smart / List
	Channel-		CH- / Page-
	Channel+		CH+ / Page+
	Phono		9
	CD		3
	Tuner		6
	DVD/VDP		2
	TV/DBS		1

Originalfernbedienung Ersatzfernbedienung







	DAT/Tape		5
	8		8
	VCR-1		4
	VCR-2		7
	11/O		0
	12/E		Fav / Marker / PC
	RF Auto/Manual		Subtitle / EQ
	Analog/Digital		Audio / Lang I/II
	Mode		Sound / Title
	Master Vol+		Vol+
	Cursor Left		Left
	Enter		OK
	Cursor Right		Right
	Master Vol-		Vol-
	Tuning Up		Shift + >> /
	Cursor Up		Up
	Tuning Down		Shift + << /

Tune-

 





Originalfernbedienung Ersatzfernbedienung

	Cursor Down		Down
	Muting		Mute / Dimmer
	Band		Shift + Stop /
	RDS		AV / Input / RDS
	Output		Display / Media
	T.Tone		Blue / Prime Video / Random
	Mode Tuner		Shift + Play /
	PTY		Shift + Preset-
	Rec Select		Shift + Smart / List
	CH Select		Yellow / YouTube / Repeat
	Memory		Shift + Pause / Step /
	RT		Shift + Preset+
	Video Select		Picture / Format
	CH Vol+		Green / APP / Repeat
	Panel		D.Menu / Top
	Dimmer		Shift + Mute / Dimmer
	On Screen		Shift + Display / Media

Originalfernbedienung Ersatzfernbedienung

	CH Vol-		Red / Netflix / Search

