





 
 

 

 

 
 
 
 






 


 
 
 








**Originalfernbedienung    Ersatzfernbedienung**

	POWER		Power
	FREEZE		Pause
	INPUT HDMI 1		Red
	INPUT HDMI 2		Green
	INPUT PC		Yellow
	INPUT		Blue
	INPUT VIDEO		Shift + Red
	INPUT S-VIDEO		Shift + Green
	BLANK		List
	AUTO		Smart
	LEFT / Vol-		Vol -
	LEFT / Vol-		Left
	UP/KEYST. UP		Up
	RIGHT / Vol+		Vol +
	RIGHT / Vol+		Right
	MODE / ENTER		Ok
	DOWN/KEYST.		Down

**Originalfernbedienung    Ersatzfernbedienung**

	ASPECT		Format
	MENU/EXIT		Exit
	MENU/EXIT		Menu
	MUTE		Mute
	USER 1		1
	USER 2		2
	USER 3		3
	BRIGHT.		4
	CONTRAST		5
	SHARP		6
	COLOR		7
	TINT		8
	PIP		9
	PIP SIZE		Guide
	PIP POS		0
	PIP ACTIVE		Pre Ch
	GAMMA		D. Menu



DOWN

