










 





 







Originalfernbedienung Ersatzfernbedienung

	Power		Power
	Mute		Mute
	Red / Eject		Red
	Red / Eject		Eject
	Green / Title		Green
	Yellow / DVD		Yellow
	Yellow / DVD		Options
	Blue / A-B		Blue
	<</[≡o]		<<
	>>/[≡?]		>>
	l<</[≡+]		l<<
	>>l/[≡..]		>>l
	Play		Play
	Pause		Pause
	Stop		Stop
	Angle / [≡i]		Smart
	Return / Text		Text

Originalfernbedienung Ersatzfernbedienung

	Return / Text		Shift + Back
	Subtitle		Subt
	Display		Shift + Info
	Menu / Info		Info
	Menu / Info		D. Menu
	Menu		Menu
	Up		Up
	Source		AV
	Left		Left
	OK		Ok
	Right		Right
	EPG		Guide
	Down		Down
	Exit		Exit
	Vol+		Vol +
	FAV		Pre Ch
	CH+		Ch +





Originalfernbedienung Ersatzfernbedienung

VOL -	Vol-	VOL -	Vol -
REP	REP	REC MODE	Rec
CH -	CH-	CH -	Ch -
1	1	1	1
2	2	2	2
3	3	3	3
4	4	4	4
5	5	5	5
6	6	6	6
7	7	7	7
8	8	8	8
9	9	9	9
AUDIO	Audio	SOUND DUAL	Dual
0	0	0	0
RECALLGOTO	Recall / Goto	RETURN BACK	Back

Originalfernbedienung Ersatzfernbedienung

