























 


Originalfernbedienung Ersatzfernbedienung

Power		Power
Mute		Mute / Dimmer
Play		Play / Slow
Pause		Pause / Step / Freeze
Stop		Stop / Hold
<<		<< / Tune-
>>		>> / Tune+
I<<		I<< / Preset-
>>I		>>I / Preset+
XDSS		Sound / Title
EQ PATT.		Subtitle / EQ
Sleep		Sleep / Timer
Program		TV/Radio /
MP3 Info		Info / Angle
Vol+		Vol+
Vol-		Vol-
1		1

Originalfernbedienung Ersatzfernbedienung

2		2
3		3
4		4
5		5
6		6
7		7
8		8
9		9
0		0
Repeat		Green / APP / Repeat
Preset Down		Shift + I<< / Preset-
Preset Up		Shift + >>I / Preset+
Tuner/Band		Shift + 6
AUX		Shift + 7

