 





 
 













 


 



 

 





 

 
 

 


 
 
 
 
 
 
 
 









Originalfernbedienung Ersatzfernbedienung

	Power		Power
	Preset Up		Ch +
	Preset Down		Ch -
	AUX		Smart
	Tuner/Band		Media
	Vol+		Vol +
	Vol-		Vol -
	Mute		Mute
	Sleep		Sleep
	Program		Shift + Sleep
	D.Skip		3D
	Play/Pause		Pause
	Stop		Stop
	>>/>>		>>
	<</<<		<<
	Repeat		Text
	Play Tape		Play

Originalfernbedienung Ersatzfernbedienung

	<< Tape		<<
	>> Tape		>>
	Tape 2		Green
	Tape 1		Red
	Rec/Pause Tape		Rec
	Stop Tape		Shift + Stop
	EQ PATT.		Dual
	XDSS		Subt
	Surr.		AV
	MP3 Info		Info
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7





Originalfernbedienung Ersatzfernbedienung Originalfernbedienung Ersatzfernbedienung

8	8	8	8
9	9	9	9
0	0	0	0

