
 




Originalfernbedienung Ersatzfernbedienung

	Power		Power
	Edit		Pre Ch
	Picture		Format
	Multimedia		Media
	Still		Pause
	Mute		Mute
	DVB/Analog		Smart
	AV		AV
	Sleep		Sleep
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8

Originalfernbedienung Ersatzfernbedienung

	9		9
	0		0
	▼/O/ /I		Dual
	S.Effect		Play
	Vol+		Vol +
	Vol-		Vol -
	PR+		Ch +
	PR-		Ch -
	Up/[≡▲]		Up
	Down/[≡▼]		Down
	Right		Right
	Left		Left
	OK/Select		Ok
	Guide		Guide
	Subtitle		Subt
	Menu		Menu
	Aspect		3D



