




 


 
 
 
 





 
 
 



 














Originalfernbedienung Ersatzfernbedienung

	Power		Power
	Sleep		Sleep
	CBL/SAT		1
	Media Player		2
	Blu-ray		3
	Game		4
	AUX1		5
	AUX2		6
	Phono		7
	TV Audio		8
	Tuner		9
	USB		Guide
	Bluetooth		0
	Internet Radio		Pre Ch
	Micro		Smart
	CH/Page Up		Ch +
	CH/Page Down		Ch -






 


 
 
 
 





 
 
 



 










Originalfernbedienung Ersatzfernbedienung

	Eco		3D
	Volume Up		Vol +
	Volume Down		Vol -
	Mute		Mute
	Info		Info
	Option		Options
	Back		Back
	Setup		Menu
	Play		Play
	Up		Up
	Down		Down
	Right		Right
	Left		Left
	Enter		Ok
	I<</Tune-		I<<
	Pause		Pause
	>>/Tune+		>>I





Originalfernbedienung Ersatzfernbedienung

	Power		Power
	Sleep		Sleep
	CBL/SAT		1
	Media Player		2
	Blu-ray		3
	Game		4
	AUX1		5
	AUX2		6
	Phono		7
	TV Audio		8
	Tuner		9
	USB		Guide
	Bluetooth		0
	Internet Radio		Pre Ch
	Micro		Smart
	CH/Page Up		Ch +
	CH/Page Down		Ch -

Originalfernbedienung Ersatzfernbedienung

	Volume Up		Vol +
	Volume Down		Vol -
	Mute		Mute
	Up		Up
	Down		Down
	Right		Right
	Left		Left
	Enter		Ok
	Back		Back
	I<</Tune-		I<<
	Play		Play
	Pause		Pause
	>>I/Tune+		>>I
	Quick Select 1		D. Menu
	Quick Select 2		Text
	Quick Select 3		Eject
	Quick Select 4		AV

