



 


 












 









 







Originalfernbedienung Ersatzfernbedienung

	Power		Power
	Timer/Play		Info / Angle
	Clock/Timer		Shift + Sleep / Timer
	Dimmer		Shift + Mute / Dimmer
	Sleep		Sleep / Timer
	Auto Off		Shift + Power
	Vol+		Vol+
	Vol-		Vol-
	Mute		Mute / Dimmer
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8

Originalfernbedienung Ersatzfernbedienung

	9		9
	0		0
	Program		TV/Radio /
	+10		Guide / EPG / -/-
	Del		Exit / Cancel / Clear
	Repeat		Green / APP / Repeat
	AUX		Shift + 7
	Play Mode		Shift + Play /
	DAB/FM		Red / Netflix / Search
	<</I<<		<< / Tune-
	>>/>>I		>> / Tune+
	Stop		Stop / Hold
	Play/Pause CD		Play / Slow
	Display		Display / Media
	Play/Pause iPod		Pause / Step / Freeze
	Re-Master		Picture / Format
	Surround		Eject / Surround



