



Originalfernbedienung Ersatzfernbedienung

	Dimmer		Shift + Mute / Dimmer
	Sleep		Sleep / Timer
	Power		Power
	Speakers A		Sound / Title
	Speakers B		Audio / Lang I/II
	Optical		1
	Coaxial		2
	CD		3
	Line 1		4
	Line 2		5
	Phono		7
	Tuner		6
	Net		8
	Bluetooth		9
	Band		Smart / List
	<< Tuning		Shift + << /
	Tuning >>		Shift + >> /

Tune+

Originalfernbedienung Ersatzfernbedienung

	Memory		Rec / Rec Mode
	< Preset		CH- / Page-
	< Preset		Shift + I<< / Preset-
	Preset >		CH+ / Page+
	Preset >		Shift + >>I / Preset+
	Clear		Exit / Cancel / Clear
	Mode		Picture / Format
	Display		Display / Media
	Up		Up
	Left		Left
	Enter		OK
	Right		Right
	Down		Down
	Home		Menu / Home
	Return		Back / Return
	Setup		Setup / OPT /
	Volume+		Vol+





Originalfernbedienung Ersatzfernbedienung

	Option		Shift + Setup / OPT / Tools
	Now Playing		Guide / EPG / -/--
	Volume-		Vol-
	Mute		Mute / Dimmer
	Repeat		Green / APP / Repeat
	Play		Play / Slow
	Pause		Pause / Step / Freeze
	Shuffle		Blue / Prime Video / Random
	I<</<<		<< / Tune-
	I<</<<		I<< / Preset-
	Stop		Stop / Hold
	>>/>>I		>> / Tune+
	>>/>>I		>>I / Preset+

Originalfernbedienung Ersatzfernbedienung

