






































































Originalfernbedienung Ersatzfernbedienung

	Standby		Power
	AQT/Auto/Open/CI		Eject / Surround
	P.Mode		Picture / Format
	S.Mode		Sound / Title
	List/Angle		Smart / List
	Aspect		Setup / OPT /
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9
	0		0
	Recall		Back / Return




 




















 


 





Originalfernbedienung Ersatzfernbedienung

	Vol+		Vol+
	Vol-		Vol-
	Mute		Mute / Dimmer
	Audio		Audio / Lang I/II
	Sub-T		Subtitle / EQ
	CH+		CH+ / Page+
	CH-		CH- / Page-
	Menu		Menu / Home
	Info		Info / Angle
	Input		AV / Input / RDS
	DVD Setup/Exit		Exit / Cancel / Clear
	Sleep		Sleep / Timer
	Up		Up
	Down		Down
	Right		Right
	Left		Left
	OK		OK





**Originalfernbedienung   Ersatzfernbedienung**

	Rec		Rec / Rec Mode
	Red/D.Prog/Tv/		Red / Netflix / Search
	Green/Step		Green / APP / Repeat
	Yellow/RPT		Yellow / YouTube / Repeat
	Blue/A-B/SCR		Blue / Prime Video / Random
	[=]/Slow		Text / Goto
	[=▲]/Stop		Stop / Hold
	[=▼]/Zoom		Zoom / Size
	[=i]/I<<		I<< / Preset-
	[+]/Play/Pause		Play / Slow
	[◆]/>>I		>>I / Preset+
	[=?]/<<<		<<< / Tune-
	[=o]/>>>		>>> / Tune+
	EPG/D.Menu		Guide / EPG / -/-
	FAV/D.Title		Fav / Marker / PC
	FAV+/D.Goto		Shift + CH+ /
	FAV-/D.Disp		Shift + CH- /

Page-
















 







 

 

 





**Originalfernbedienung   Ersatzfernbedienung**



 







 

 

 















 










**Originalfernbedienung    Ersatzfernbedienung**

	Standby		Power
	AQT/Auto/Open/CI		Eject / Surround
	P.Mode		Picture / Format
	S.Mode		Sound / Title
	List/Angle		Smart / List
	Aspect		Setup / OPT /
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9
	0		0
	Recall		Back / Return

**Originalfernbedienung    Ersatzfernbedienung**

	Vol+		Vol+
	Vol-		Vol-
	Mute		Mute / Dimmer
	Audio		Audio / Lang I/II
	Sub-T		Subtitle / EQ
	CH+		CH+ / Page+
	CH-		CH- / Page-
	Menu		Menu / Home
	Info		Info / Angle
	Input		AV / Input / RDS
	DVD Setup/Exit		Exit / Cancel / Clear
	Sleep		Sleep / Timer
	Up		Up
	Down		Down
	Right		Right
	Left		Left
	OK		OK





**Originalfernbedienung Ersatzfernbedienung**

	Rec		Rec / Rec Mode
	Red/D.Prog/Tv/		Red / Netflix / Search
	Green/Step		Green / APP / Repeat
	Yellow/RPT		Yellow / YouTube / Repeat
	Blue/A-B/SCR		Blue / Prime Video / Random
	[=]/Slow		Text / Goto
	[=▲]/Stop		Stop / Hold
	[=▼]/Zoom		Zoom / Size
	[=i]/I<<		I<< / Preset-
	[+]/Play/Pause		Play / Slow
	[◇]/>>I		>>I / Preset+
	[=?]/<<		<< / Tune-
	[=o]/>>		>> / Tune+
	EPG/D.Menu		Guide / EPG / --
	FAV/D.Title		Fav / Marker / PC
	FAV+/D.Goto	+	Shift + CH+ /
	FAV-/D.Disp	+	Shift + CH- /

**Originalfernbedienung Ersatzfernbedienung**