

 


Originalfernbedienung Ersatzfernbedienung

| | | | |
|---|------------|---|----------------------|
|  | POWER |  | Power |
|  | SOURCE |  | Source |
|  | ASPECT |  | Eco / Aspect |
|  | FREEZE |  | Freeze / Timer |
|  | BLANK |  | Blank / Mute |
|  | MUTE |  +  | Shift + Blank / Mute |
|  | VOL+ |  | Vol + / Page + |
|  | MENU |  | Menu |
|  | AUTO |  | Auto |
|  | VOL- |  | Vol - / Page - |
|  | PIP SIZE |  +  | Shift + Left |
|  | PIP SOURCE |  +  | Shift + Up |
|  | D.ZOOM+ |  | + / Play |
|  | PIP POS |  +  | Shift + Right |
|  | RETURN |  | Volt / Focus |
|  | D.ZOOM- |  | - / Stop |
| | KEystone |  | Down |

Originalfernbedienung Ersatzfernbedienung

| | | | |
|--|-------------|---|------|
| | KEystone UP |  | Up |
| | EXIT |  | Mode |



DOWN