









































Originalfernbedienung Ersatzfernbedienung

	Standby / On		Power
	Title/Speed		Shift + Sound / Title
	Mark / Index		Fav / Marker / PC
	>> / >>		>> / Preset+
	<< / <<		<< / Preset-
	TV Mute		Mute / Dimmer
	Disc Menu		D.Menu / Top
	Clear		Exit / Cancel / Clear
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9

Originalfernbedienung Ersatzfernbedienung

	0		0
	Input Sel.		AV / Input / RDS
	Display		Display / Media
	Zoom		Zoom / Size
	3D Sound		Sound / Title
	Subtitle		Subtitle / EQ
	Vol+		Vol+
	Vol-		Vol-
	TRK/Prog+		CH+ / Page+
	TRK/Prog-		CH- / Page-
	Up		Up
	Left		Left
	Setup / Enter		OK
	Setup / Enter		Setup / OPT /
	Right		Right
	Down		Down
	Return / A.Dub		Back / Return





Originalfernbedienung Ersatzfernbedienung

	Screen Fit / SVHS		Picture / Format
	TV / VCR		TV/Radio /
	Angle		Info / Angle
	Open / Close		Eject / Surround
	Stop		Stop / Hold
	Play / Pause		Play / Slow
	Play / Pause		Pause / Step / Freeze
	Rec		Rec / Rec Mode
	I<<< / <<<		<<< / Tune-
	>>> / >>>		>>> / Tune+
	Audio		Audio / Lang I/II
	DVD		Shift + 2
	VCR		Shift + 4
	Mode / Repeat		Green / APP / Repeat

Originalfernbedienung Ersatzfernbedienung

