










 




 





Originalfernbedienung Ersatzfernbedienung

| | | | |
|---|------------|---|------------------------|
|  | Power |  | Power |
|  | Open/Close |  | Eject / Surround |
|  | V.Mode |  | Picture / Format |
|  | OSD |  | Display / Media |
|  | P/N |  | AV / Input / RDS |
|  | Program |  | TV/Radio / |
|  | Menu |  | Menu / Home |
|  | Title |  | Sound / Title |
|  | Subtitle |  | Subtitle / EQ |
|  | Angle |  | Info / Angle |
|  | Search |  | Red / Netflix / Search |
|  | Setup |  | Setup / OPT / |
|  | 1 |  | 1 |
|  | 2 |  | 2 |
|  | 3 |  | 3 |
|  | 4 |  | 4 |
|  | 5 |  | 5 |

Originalfernbedienung Ersatzfernbedienung

| | | | |
|---|--------|---|-----------------------|
|  | 6 |  | 6 |
|  | 7 |  | 7 |
|  | 8 |  | 8 |
|  | 9 |  | 9 |
|  | 0 |  | 0 |
|  | 10+ |  | Guide / EPG / -/-- |
|  | Up |  | Up |
|  | Down |  | Down |
|  | Right |  | Right |
|  | Left |  | Left |
|  | Enter |  | OK |
|  | PBC |  | Text / Goto |
|  | Return |  | Back / Return |
|  | Zoom |  | Zoom / Size |
|  | Play |  | Play / Slow |
|  | Pause |  | Pause / Step / Freeze |
|  | Stop |  | Stop / Hold |



