







Originalfernbedienung Ersatzfernbedienung

	Standby		Power
	Open/Close		Eject / Surround
	Up		Up
	Down		Down
	Right		Right
	Left		Left
	Set Up		Setup / OPT /
	Return		Back / Return
	Menu		Menu / Home
	Green		Green / APP / Repeat
	Yellow		Yellow / YouTube / Repeat
	Red		Red / Netflix / Search
	Blue		Blue / Prime Video / Random
	Play		Play / Slow
	Pause/Step		Pause / Step / Freeze
	Stop		Stop / Hold
	I<<		I<< / Preset-



 


Originalfernbedienung Ersatzfernbedienung

	>>		>> / Preset+
	<<		<< / Tune-
	>>		>> / Tune+
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9
	0		0
	10+		Guide / EPG / -/-
	Audio		Audio / Lang I/II
	Title		Sound / Title
	Clear		Exit / Cancel / Clear





Originalfernbedienung Ersatzfernbedienung

REPEAT	Repeat	 + 	Shift + Green / APP /
PROG	Prog		TV/Radio /
ZOOM	Zoom		Zoom / Size
V-REMOTE	V-Remote		Picture / Format
INTRO	Intro		OK
EQ	EQ	 + 	Shift + Subtitle / EQ
KARAOKE	Karaoke		AV / Input / RDS
MARK	Mark		Fav / Marker / PC
SEARCH	Search	 + 	Shift + Red / Netflix /
DISPLAY	Display		Display / Media
IS/PS	IS/PS		Smart / List
SUBTITLE	Subtitle		Subtitle / EQ
VOL +	Vol+		Vol+
- VOL	Vol-		Vol-

Originalfernbedienung Ersatzfernbedienung

