 






Originalfernbedienung Ersatzfernbedienung

	Standby		Power
	Open/Close		Eject / Surround
	Up		Up
	Down		Down
	Right		Right
	Left		Left
	Set Up		Setup / OPT /
	Return		Back / Return
	Menu		Menu / Home
	Green		Green / APP / Repeat
	Yellow		Yellow / YouTube / Repeat
	Red		Red / Netflix / Search
	Blue		Blue / Prime Video / Random
	Play		Play / Slow
	Pause/Step		Pause / Step / Freeze
	Stop		Stop / Hold
	I<<		I<< / Preset-

Originalfernbedienung Ersatzfernbedienung

	>>I		>>I / Preset+
	<<		<< / Tune-
	>>		>> / Tune+
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9
	0		0
	10+		Guide / EPG / -/-
	Audio		Audio / Lang I/II
	Title		Sound / Title
	Clear		Exit / Cancel / Clear



