



Originalfernbedienung Ersatzfernbedienung

	Power		Power
	1		1
	2		2
	3		3
	PIP		Info / Angle
	4		4
	5		5
	6		6
	[<>]		Picture / Format
	>		>> / Preset+
	7		7
	8		8
	9		9
	?		Smart / List
	<		<< / Preset-
	0		0
	Mute		Mute / Dimmer

Originalfernbedienung Ersatzfernbedienung

	i/OSD		Display / Media
	Z/Disc Menu		Menu / Home
	Up		Up
	P+		CH+ / Page+
	Left		Left
	Vol-		Vol-
	OK		OK
	Right		Right
	Vol+		Vol+
	TXT		Text / Goto
	<<		<< / Tune-
	Down		Down
	P-		CH- / Page-
	TV-G		Guide / EPG / -/-
	>>		>> / Tune+
	Red/Image/I>		Red / Netflix / Search
	Green/Timer		Green / APP / Repeat





























 

 

 

 



Originalfernbedienung Ersatzfernbedienung

	Play		Play / Slow
	Yellow/Pause		Yellow / YouTube / Repeat
	Pause		Pause / Step / Freeze
	Blue/Sound		Blue / Prime Video / Random
	Stop		Stop / Hold
	Blue/Sound		Sound / Title



































Originalfernbedienung Ersatzfernbedienung




Originalfernbedienung Ersatzfernbedienung

	Power		Power
	1		1
	2		2
	3		3
	Audio		Audio / Lang I/II
	4		4
	5		5
	6		6
	[<>]		Zoom / Size
	>		>> / Preset+
	7		7
	8		8
	9		9
	?		Smart / List
	<		<< / Preset-
	0		0
	i/OSD		Display / Media







 









Originalfernbedienung Ersatzfernbedienung

	Disc Menu		D.Menu / Top
	Disc Menu		Menu / Home
	Up		Up
	P+		CH+ / Page+
	Left		Left
	Vol-		Vol-
	OK		OK
	Right		Right
	Vol+		Vol+
	TXT		Text / Goto
	<<		<< / Tune-
	Down		Down
	P-		CH- / Page-
	TV-G		Guide / EPG / -/-
	>>		>> / Tune+
	Red/Picture		Picture / Format
	Red/Picture		Red / Netflix / Search





Originalfernbedienung Ersatzfernbedienung

	Green / Timer		Sleep / Timer
	Play		Play / Slow
	Green / Timer		Green / APP / Repeat
	Yellow/Pause		Yellow / YouTube / Repeat
	Pause		Pause / Step / Freeze
	Blue/Sound		Sound / Title
	Stop		Stop / Hold
	Blue/Sound		Blue / Prime Video / Random

Originalfernbedienung Ersatzfernbedienung





Originalfernbedienung Ersatzfernbedienung

	Power		Power
	1		1
	2		2
	3		3
	Audio		Audio / Lang I/II
	4		4
	5		5
	6		6
	[<>]		Zoom / Size
	>		>> / Preset+
	7		7
	8		8
	9		9
	?		Smart / List
	I<		I<< / Preset-
	0		0
	Mute		Mute / Dimmer







 
 








Originalfernbedienung Ersatzfernbedienung

	i/OSD		Display / Media
	Z/Disc Menu		Menu / Home
	Up		Up
	P+		CH+ / Page+
	Left		Left
	Vol-		Vol-
	OK		OK
	Right		Right
	Vol+		Vol+
	TXT		Text / Goto
	<<		<< / Tune-
	Down		Down
	P-		CH- / Page-
	TV-G		Guide / EPG / -/-
	>>		>> / Tune+
	Red/Image/I>		Red / Netflix / Search
	Red/Image/I>		Shift + Play / Slow







Originalfernbedienung Ersatzfernbedienung

	Green/Timer		Green / APP / Repeat
	Play		Play / Slow
	Green/Timer		Sleep / Timer
	Pause		Pause / Step / Freeze
	Yellow/Pause		Yellow / YouTube / Repeat
	Blue/Sound		Blue / Prime Video / Random
	Stop		Stop / Hold
	Blue/Sound		Sound / Title
































 


Originalfernbedienung Ersatzfernbedienung




Originalfernbedienung Ersatzfernbedienung

	Power		Power
	1		1
	2		2
	3		3
	PIP/Audio		Audio / Lang I/II
	4		4
	5		5
	6		6
	[<>]		Zoom / Size
	7		7
	8		8
	9		9
	?		Smart / List
	I<		I<< / Preset-
	>I		>>I / Preset+
	0		0
	i/OSD		Display / Media

Originalfernbedienung Ersatzfernbedienung

	Z/Disc Menu		Menu / Home
	P+		CH+ / Page+
	Up		Up
	Left		Left
	Vol-		Vol-
	OK		OK
	Right		Right
	Vol+		Vol+
	TXT		Text / Goto
	<<		<< / Tune-
	P-		CH- / Page-
	Down		Down
	TV-G		Guide / EPG / -/-
	>>		>> / Tune+
	Red/Image/I>		Picture / Format
	Red/Image/I>		Red / Netflix / Search
	Green/Timer		Green / APP / Repeat





Originalfernbedienung	Ersatzfernbedienung	Originalfernbedienung	Ersatzfernbedienung
-----------------------	---------------------	-----------------------	---------------------

▶	Play		Play / Slow
▶	Green/Timer		Sleep / Timer
	Yellow/Pause		Yellow / YouTube / Repeat
	Pause		Pause / Step / Freeze
🌀	Blue/Sound		Blue / Prime Video / Random
🌀	Stop		Stop / Hold
🌀	Blue/Sound		Sound / Title

