



Originalfernbedienung Ersatzfernbedienung

	Bass Bost		Subtitle / EQ
	Display		Display / Media
	Power		Power
	Tune Memory N. 1		1
	Tune Memory N. 2		2
	Tune Memory N. 3		3
	Tune Memory N. 4		4
	Tune Memory N. 5		5
	Tune Memory N. 6		6
	FM		Shift + 6
	AM		Shift + 1
	AUDIO IN		Shift + 2
	CD		Shift + 3
	USB		8
	USB		Shift + 8
	Tuner Memory		Smart / List
	Clear		Exit / Cancel / Clear





Originalfernbedienung Ersatzfernbedienung

	Up / Folder+		Up
	Play Mode / Tuning Mode		Setup / OPT /
	Repeat / FM Mode		Green / APP / Repeat
	Left		Left
	OK		OK
	Right		Right
	Volume+		Vol+
	Return		Back / Return
	Down / Folder-		Down
	Timer Menu		Menu / Home
	Volume-		Vol-
	I<< / -		I<< / Preset-
	Pause		Pause / Step / Freeze
	>>I / +		>>I / Preset+
<< button"/>	<<		<< / Tune-
	Play		Play / Slow
>> button"/>	>>		>> / Tune+





Originalfernbedienung Ersatzfernbedienung

	Sleep		Sleep / Timer
	Stop		Stop / Hold

Originalfernbedienung Ersatzfernbedienung