

 

 

 
 
 









 

 
 


 

 













































Originalfernbedienung Ersatzfernbedienung

	Power		Power
	Volume-		Vol-
	Volume+		Vol+
	LD/VCR		Red / Netflix / Search
	LD/VCR		4
	Phono		Green / APP / Repeat
	Phono		2
	CD Direct		Yellow / YouTube / Repeat
	CD Direct		3
	Surround		Eject / Surround
	Surround		Blue / Prime Video / Random
	< Deck 1		Left
	Deck 1 >		Right
	<< Deck 1		Down
	Deck 1 >>		Up
	Stop Deck 1		OK
	< Deck 2		Shift + Left



 

 

 
 
 









 

 
 


 

 







Originalfernbedienung Ersatzfernbedienung

	Deck 2 >		Shift + Right
	<< Deck 2		Shift + Down
	Deck 2 >>		Shift + Up
	Rec Deck 2		Shift + Rec / Rec Mode
	Pause Deck 2		Shift + Pause / Step /
	Stop Deck 2		Shift + OK
	Tuner Station -		CH- / Page-
	Tuner Station -		Shift + I<< / Preset-
	Tuner Station +		CH+ / Page+
	Tuner Station +		Shift + >>I / Preset+
	Disc CD		D.Menu / Top
	Play CD		Play / Slow
	I<< CD		I<< / Preset-
	>>I CD		>>I / Preset+
	Pause CD		Pause / Step / Freeze
	Stop CD		Stop / Hold
	Sound Control On/Off		Sound / Title




 


































Originalfernbedienung Ersatzfernbedienung

	Power		Power
	Volume-		Vol-
	Volume+		Vol+
	LD/VCR		Red / Netflix / Search
	LD/VCR		4
	Phono		Green / APP / Repeat
	Phono		2
	CD Direct		Yellow / YouTube / Repeat
	CD Direct		3
	Surround		Eject / Surround
	Surround		Blue / Prime Video / Random
	< Deck 1		Left
	Deck 1 >		Right
	<< Deck 1		Down
	Deck 1 >>		Up
	Stop Deck 1		OK
	< Deck 2		Shift + Left

Originalfernbedienung Ersatzfernbedienung

	Deck 2 >		Shift + Right
	<< Deck 2		Shift + Down
	Deck 2 >>		Shift + Up
	Rec Deck 2		Shift + Rec / Rec Mode
	Pause Deck 2		Shift + Pause / Step / Step
	Stop Deck 2		Shift + OK
	Tuner Station -		CH- / Page-
	Tuner Station -		Shift + I<< / Preset-
	Tuner Station +		CH+ / Page+
	Tuner Station +		Shift + >>I / Preset+
	Disc CD		D.Menu / Top
	Play CD		Play / Slow
	I<< CD		I<< / Preset-
	>>I CD		>>I / Preset+
	Pause CD		Pause / Step / Freeze
	Stop CD		Stop / Hold
	Sound Control On/Off		Sound / Title



