

 




Originalfernbedienung Ersatzfernbedienung

|   |               |  |                               |
|---|---------------|--|-------------------------------|
|    | Power         |     | Power                         |
|    | Open/Close    |     | Eject / Surround              |
|    | 1             |     | 1                             |
|    | 2             |     | 2                             |
|    | 3             |     | 3                             |
|    | 4             |     | 4                             |
|    | 5             |     | 5                             |
|    | 6             |     | 6                             |
|    | 7             |     | 7                             |
|    | 8             |     | 8                             |
|  | 9             |   | 9                             |
|  | 0             |   | 0                             |
|  | Cancel        |  | Shift + Exit / Cancel / Clear |
|  | Audio         |   | Audio / Lang I/II             |
|  | Receiver Vol+ |   | Vol+                          |
|  | Receiver Vol- |   | Vol-                          |
|  | Receiver Mute |   | Mute / Dimmer                 |





Originalfernbedienung Ersatzfernbedienung

|   |                           |   |                             |
|---|---------------------------|---|-----------------------------|
|    | Vieta Cast                |    | Smart / List                |
|    | I<< Skip                  |    | I<< / Preset-               |
|    | Skip >>I                  |    | >>I / Preset+               |
|    | << Slow/Search            |    | << / Tune-                  |
|    | Slow/Search >>            |    | >> / Tune+                  |
|    | Stop                      |    | Stop / Hold                 |
|    | Pause                     |    | Pause / Step / Freeze       |
|    | Play                      |    | Play / Slow                 |
|    | Status                    |    | Text / Goto                 |
|    | Exit                      |    | Exit / Cancel / Clear       |
|  | Option                    |  | Shift + Setup / OPT / Tools |
|  | Return                    |  | Back / Return               |
|  | Top Menu/Direct Navigator |  | D.Menu / Top                |
|  | Pop-Up Menu               |  | Shift + Menu /              |
|  | Function Menu             |  | Menu / Home                 |
|  | Up                        |  | Up                          |
|  | Down                      |  | Down                        |





Originalfernbedienung Ersatzfernbedienung

|   |              |   |                             |
|---|--------------|---|-----------------------------|
|    | Right        |    | Right                       |
|    | Left         |    | Left                        |
|    | OK           |    | OK                          |
|    | Red          |    | Red / Netflix / Search      |
|    | Green        |    | Green / APP / Repeat        |
|    | Yellow       |    | Yellow / YouTube / Repeat   |
|    | Blue         |    | Blue / Prime Video / Random |
|    | Setup        |    | Setup / OPT /               |
|    | PIP          |    | Picture / Format            |
|    | Display      |    | Display / Media             |
|   | Select Drive |   | AV / Input / RDS            |
|  | Power Tv     |  +  | Shift + Power               |
|  | AV Tv        |  +  | Shift + AV / Input / RDS    |
|  | TV Vol+      |  +  | Shift + Vol+                |
|  | TV Vol-      |  +  | Shift + Vol-                |
|  | TV CH+       |  +  | CH+ / Page+                 |
|  | TV CH-       |  +  | CH- / Page-                 |

Originalfernbedienung Ersatzfernbedienung

|  |  |
|--|--|
|  |  |
|  |  |
|  |  |
|  |  |
|  |  |
|  |  |
|  |  |
|  |  |
|  |  |
|  |  |
|  |  |
|  |  |
|  |  |
|  |  |
|  |  |
|  |  |

