



Originalfernbedienung	Ersatzfernbedienung		
	Power		Power
	Sleep		Sleep / Timer
	Dimmer	+	Shift + Mute / Dimmer
	USB		8
	CD		3
	Radio		TV/Radio /
	I<</<<		<< / Tune-
	Play/Pause		Play / Slow
	>>I/>>		Blue / Prime Video / Random
	Stop		Stop / Hold
	Vol+		Vol+
	Vol-		Vol-
	Mute		Mute / Dimmer
	Setup		Setup / OPT /
	Display		Display / Media
	Sound		Sound / Title
	Play Menu		Menu / Home

Originalfernbedienung	Ersatzfernbedienung		
	Album Down		CH- / Page-
	Album Up		CH+ / Page+
	OK		OK

