
 
 

 
 

 



 





| Originalfernbedienung | Ersatzfernbedienung | Originalfernbedienung | Ersatzfernbedienung |
|---|---------------------|---|----------------------|
|  | Power |  | Power |
|  | Eject |  | Eject / Surround |
|  | Bluetooth/Dock |  | 9 |
|  | FM/CD |  | 3 |
|  | Audio In/USB |  | AV / Input / RDS |
|  | Up |  | Up |
|  | Down |  | Down |
|  | >> |  | >> / Preset+ |
|  | << |  | << / Preset- |
|  | OK |  | OK |
|  | Vol+ |  | Vol+ |
|  | Vol- |  | Vol- |
|  | Mute |  | Mute / Dimmer |
|  | Play/Pause |  | Play / Slow |
|  | Menu |  | Menu / Home |
|  | RDS/Display |  | Display / Media |
|  | Repeat/Shuffle |  | Green / APP / Repeat |

| Originalfernbedienung | Ersatzfernbedienung | Originalfernbedienung | Ersatzfernbedienung |
|---|---------------------|---|---------------------|
|  | Prog |  | TV/Radio / |
|  | Sound |  | Sound / Title |
|  | Clock |  | Sleep / Timer |
|  | Sleep/Timer |  | Setup / OPT / |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |

