






 


 

 










 

 

 













 
















Originalfernbedienung Ersatzfernbedienung

	Power DVD		Power
	Stop		Stop / Hold
	Pause		Pause / Step / Freeze
	Play		Play / Slow
	<<		<< / Tune-
	>>		>> / Tune+
	I<<		I<< / Preset-
	>>I		>>I / Preset+
	Menu		Menu / Home
	Return		Back / Return
	On Screen		Display / Media
	Theater Position		Smart / List
	Enter		OK
	Up		Up
	Down		Down
	Right		Right
	Left		Left

 

Originalfernbedienung Ersatzfernbedienung

	Cancel		Exit / Cancel / Clear
	Zoom		Zoom / Size
	Subtitle		Subtitle / EQ
	Angle		Info / Angle
	3D Phonic		Audio / Lang I/II
	Strobe		AV / Input / RDS
	Digest		Picture / Format
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9
	0		0





Originalfernbedienung Ersatzfernbedienung

	10		Guide / EPG / -/--
	+10		Fav / Marker / PC
	Open/Close		Eject / Surround
	Resume		Text / Goto
	Power Tv		Shift + Power
	Tv/Video		TV/Radio /
	Tv CH+		CH+ / Page+
	Tv CH-		CH- / Page-
	Tv Vol+		Vol+
	Tv Vol-		Vol-
	Enter Tv		Shift + OK
	1 Tv		Shift + 1
	2 Tv		Shift + 2
	3 Tv		Shift + 3
	4 Tv		Shift + 4
	5 Tv		Shift + 5
	6 Tv		Shift + 6

Originalfernbedienung Ersatzfernbedienung

	7 Tv		Shift + 7
	8 Tv		Shift + 8
	9 Tv		Shift + 9
	0 Tv		Shift + 0
	10 Tv		Shift + Guide / EPG / -/--

